


Reed Strength Gauge „RSG 20“

for Clarinet and Saxophone Reeds

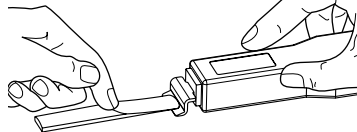

Operating instructions

1. Place the device on a horizontal, flat surface.
2. Press the “TARE” button to turn the gauge on. After about 2 seconds, the display will show 0.0 g.
3. Move the tip of the reed carefully against the sensor. Then press the reed down behind the vamp.
4. Read the measurement in the display. Compare this value with other reeds, or with the values of a reed strength table.
5. Press the “MODE” button to switch between grams and ounces (g/oz).
6. Press the “HOLD” button to freeze the readings on the LCD. Press the “HOLD” button again to return to the normal weighing mode or wait 15 seconds until the display automatically returns to the normal mode.
7. Press and hold the “TARE” button for 2 seconds to switch off the gauge.

Please note

- The product is a precise instrument, sensitive to within 0.1 g. Please treat it gently.
- The maximum measuring weight should never be over 450 g (15.873 oz).
- Do not use the gauge close to radio waves or magnetic fields.
- If the LCD shows “Err” after turning it on without any load, the sensor of the gauge may be damaged.
- If the weigh is more than 310 g (10.935 oz), the LCD will show “0-LD”, indicating that it is not suitable to be measured.
- The LCD will display “LO” when the battery power is very low. If this is the case, the product will turn itself off after 1 second. Two AAA batteries are required. To replace the battery, unscrew the battery cover on the back and replace the batteries according to the polarity indicated by the “+” and “-” sign.
- Please clean the gauge only with a dry cloth. Do not clean it with chemical solvents.